


Calvin Klein
swiss made

digital user manual

display mode

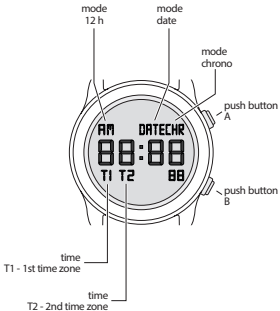

navigation

4 display modes


mode 12h



mode 12h



mode 24h

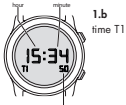

mode 24h



navigation

4 display modes



3
from date to chrono
press 2 seconds: B
selection mode "chrono"

mode 12h



4.a
from chrono to time T2
press 2 seconds: B
selection mode "time T2"

mode 24h



4.b
from chrono to time T2
press 2 seconds: B
selection mode "time T2"

mode 12h



5.a

From T2 to T1

press 2 seconds: B

selection mode "time T1"

mode 24h



5.b

From T2 to T1

press 2 seconds: B

selection mode "time T1"

chrono mode

split-time or intermediate time function



- 1**
start
press A
start chrono



- 2**
Intermediate time
press B
(display flashes, times
continues in
the background).



- 3**
restart
press B
(split second)



- 4**
Intermediate time
press B
(display flashes, times
continues in
the background).



5
restart
press B
(split second)



6
stop
press A



7
reset to zero
press B

chrono mode

ADD function



- 1** start
press A
start chrono



- 2** stop
press A
(the time does not
continue in the
background)



- 3** restart
press A



- 4** stop
press A
(the time does not
continue in the
background)



5
restart
press A



6
stop
press A



7
Reset to zero
press B

backlight mode



press 2 seconds: A

backlight mode T1 date, T2

Duration of backlight : 5 seconds

In chrono mode

pressing 2 seconds A when chrono is **on**, it will stop the chrono

pressing 2 seconds A when chrono is **off**, it will start the chrono

end of Life (EOL)



the display goes off for 1 second every 4 seconds

how to adjust your watch T1 mode 12h or 24h



- 1**
press 3 seconds: A
display flashes

mode 12h



- 2.a**
press A or B
selection display
12h or 24h mode

mode 24h



- 2.b**
press A or B
selection display
12h or 24h mode

year

mode 12h



3.a
press 2 seconds: B
display "year" flashes

mode 12h



4.a
press A (+) or B
(-) to change the
display year

mode 24h



3.b
press 2 seconds: B
display "year" flashes

mode 24h



4.b
press A (+) or B
(-) to change the
display year

month

mode 12h



5.a
press 2 seconds: B
display "month" flashes

mode 12h



6.a
press A (+) or B (-) to
change the display month

mode 24h



5.b
press 2 seconds: B
display "month" flashes

mode 24h



6.b
press A (+) or B (-) to
change the display month

day

mode 12h



7.a
press 2 seconds: B
display "day" flashes

mode 12h



8.a
press A (+) or B (-)
to change the display day

mode 24h



7.b
press 2 seconds: B
display "day" flashes

mode 24h



8.b
press A (+) or B (-)
to change the display day

minute

mode 12h



9.a
press 2 seconds: B
display "minute" flashes

mode 12h



10.a
press button A (+) or B
(-) to change the display
minute

mode 24h



9.b
press 2 seconds: B
display "minute" flashes

mode 24h



10.b
press button A (+) or B
(-) to change the display
minute

hour

mode 12h



11.a
press 2 seconds: B
display "hour" flashes

mode 12h



12.a
press A (+) or B (-)
to change the display hour

mode 24h



11.b
press 2 seconds: B
display "hour" flashes

mode 24h



12.b
press A (+) or B (-)
to change the display hour

second

mode 12h



13.a
press 2 seconds: B
display "second" flashes

mode 12h



14.a
press B
synchronise 00 sec

mode 24h



13.b
press 2 seconds: B
display "second" flashes

mode 24h



14.b
press B
synchronise 00 sec

how to adjust your watch T2 minute

mode 12h



1.a
press 3 seconds: A
display "minute" flashes

mode 12h



2.a
press button A (+) or B
(-) to change the display
minute

mode 24h



1.b
press 3 seconds: A
display "minute" flashes

mode 24h



2.b
press button A (+) or B
(-) to change the display
minute

hour

mode 12h



3.a
press 2 seconds: B
display "hour" flashes

mode 12h



4.a
press A (+) or B (-) to
change the display hour

mode 24h



3.b
press 2 seconds: B
display "hour" flashes

mode 24h



4.b
press A (+) or B (-) to
change the display hour

second

mode 12h



5.a

press 2 seconds: B

second synchronizes to T1

mode 24h



5.b

press 2 seconds: B

second synchronizes to T1

K880.115.005